

1 ¾" AND 1 ⅝" NOZZLE INSERTS™

USER GUIDE

Item#: HMNI1.75, HMNI1.125

OVERVIEW

- Use the 2 ½" Hose Monster Flow Chart for determining the flow- rate.
- The 1 ¾" and 1 ⅝" Nozzle Inserts are inserted in the 2 ½" Hose Monsters® for obtaining flow-rates lower than 533 GPM.
 - The 1 ¾" FM Nozzle Inserts measures from 282-771 GPM.
 - The 1 ⅝" FM Nozzle Inserts measures from 118-324 GPM.



ASSEMBLY

- 1) Lightly lubricate the outside of the Nozzle Insert with grease or petroleum jelly. (recommended)
- 2) Insert the nozzle insert into the inlet of the Hose Monster seating it against the gasket ring. The small opening in the nozzle insert must be toward the pitot.
- 3) Slide the male hose coupling over the nozzle insert and thread it into the female coupling on the Hose Monster.
- 4) Tighten the coupling.
- 5) Continue the setup using the 2 ½" Hose Monster instructions.
- 6) After the tests are complete, remove the nozzle insert from the Hose Monster.

MAINTENANCE

- Store the nozzle insert in a manner to protect it from damage.
- Wipe dirt and debris off with a damp cloth after each use.
- Ensure the O-ring is present and not torn or damaged. Without the O-ring, there may be leakage. Replace as necessary.

